

# Changing the Mach prefilter on your Kinetico water softener

The Mach prefilter is reusable 3 times.



MUNICIPAL WATER: rinse filter every 6 months. WELL WATER: rinse filter every 1-3 months.

Rinse sediment from the Mach prefilter using only cold water. Do NOT use soap or chemicals when cleaning the filter. A soft brush may be used if needed to clean in between the filter pleats.



Put a bucket under the filter housing.

If the black tube coming out of the filter house is not running into a floor drain or utility sink, let it run into the bucket.

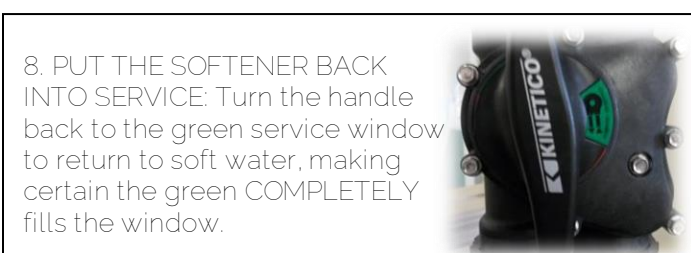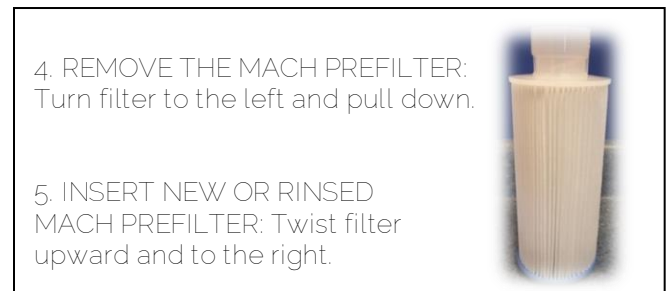

NOTE: 1x-2x/year, LUBRICATE THE THICK GRAY O-RING around the filter house with silicone before reattaching the sump to the filter house. DO NOT USE VASELINE or other lubricants as that will degrade the O-ring. A packet of silicone is included in each new Mach prefilter package.